


Getting Started with InfraRed Remote Transmitter for Color Vortexor

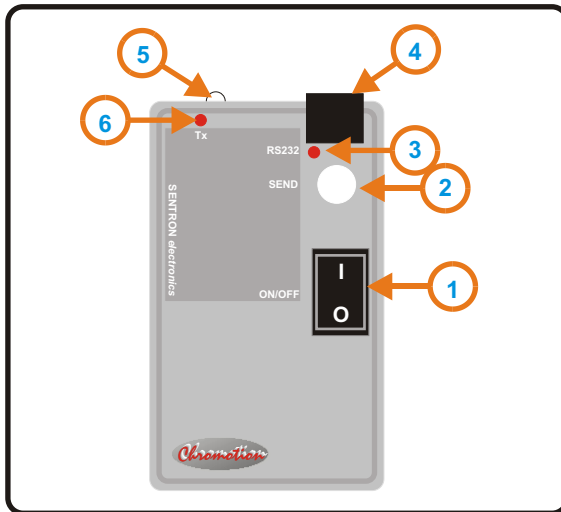

LEGEND

- 1 power ON/OFF switch
- 2 IR transfer GO/STOP button
- 3 PC connection indicator LED
- 4 4P4C connector
- 5 IR transmitter
- 6 standby / transmission indicator LED

step1: text and graphics editing

Edit the information You want.
For more on using the editor, see
Users Manual Help, Editing section

step3: transfer to unit

Hold the IRT straight upward and press the GO button.
Please wait until the transfer occurs

step2: information transfer from PC to IRT

Connect the IRT to the PC's serial port.
Press the power ON switch. The READY LED will blink twice longer then continue blinking shortly.
Open the SEND fly-out, select the allocated port and the device type, then press 'Send Data'.
Please wait until the transfer ends.